

User's Manual

Islamic eBook


[7" Colour Touch Screen]



Table of Contents:


Device Overview	3
Using Battery	4
Quick Start Guide	5
Main Menu	6
Al-Dhiker Menu	7
Al-Quran	8
Prayer Time & Qibla	10
Reading eBooks	13
Uthmanic Quran	18
Settings	
Volume	21
Back-Light	22
Date & Time	23
Stand-by	24
Language	25
Touch Calibration	26
System Information	27
Viewing Images or Photos	28
Playing Audio and Video	29
PC Connectivity	31

 Device Overview

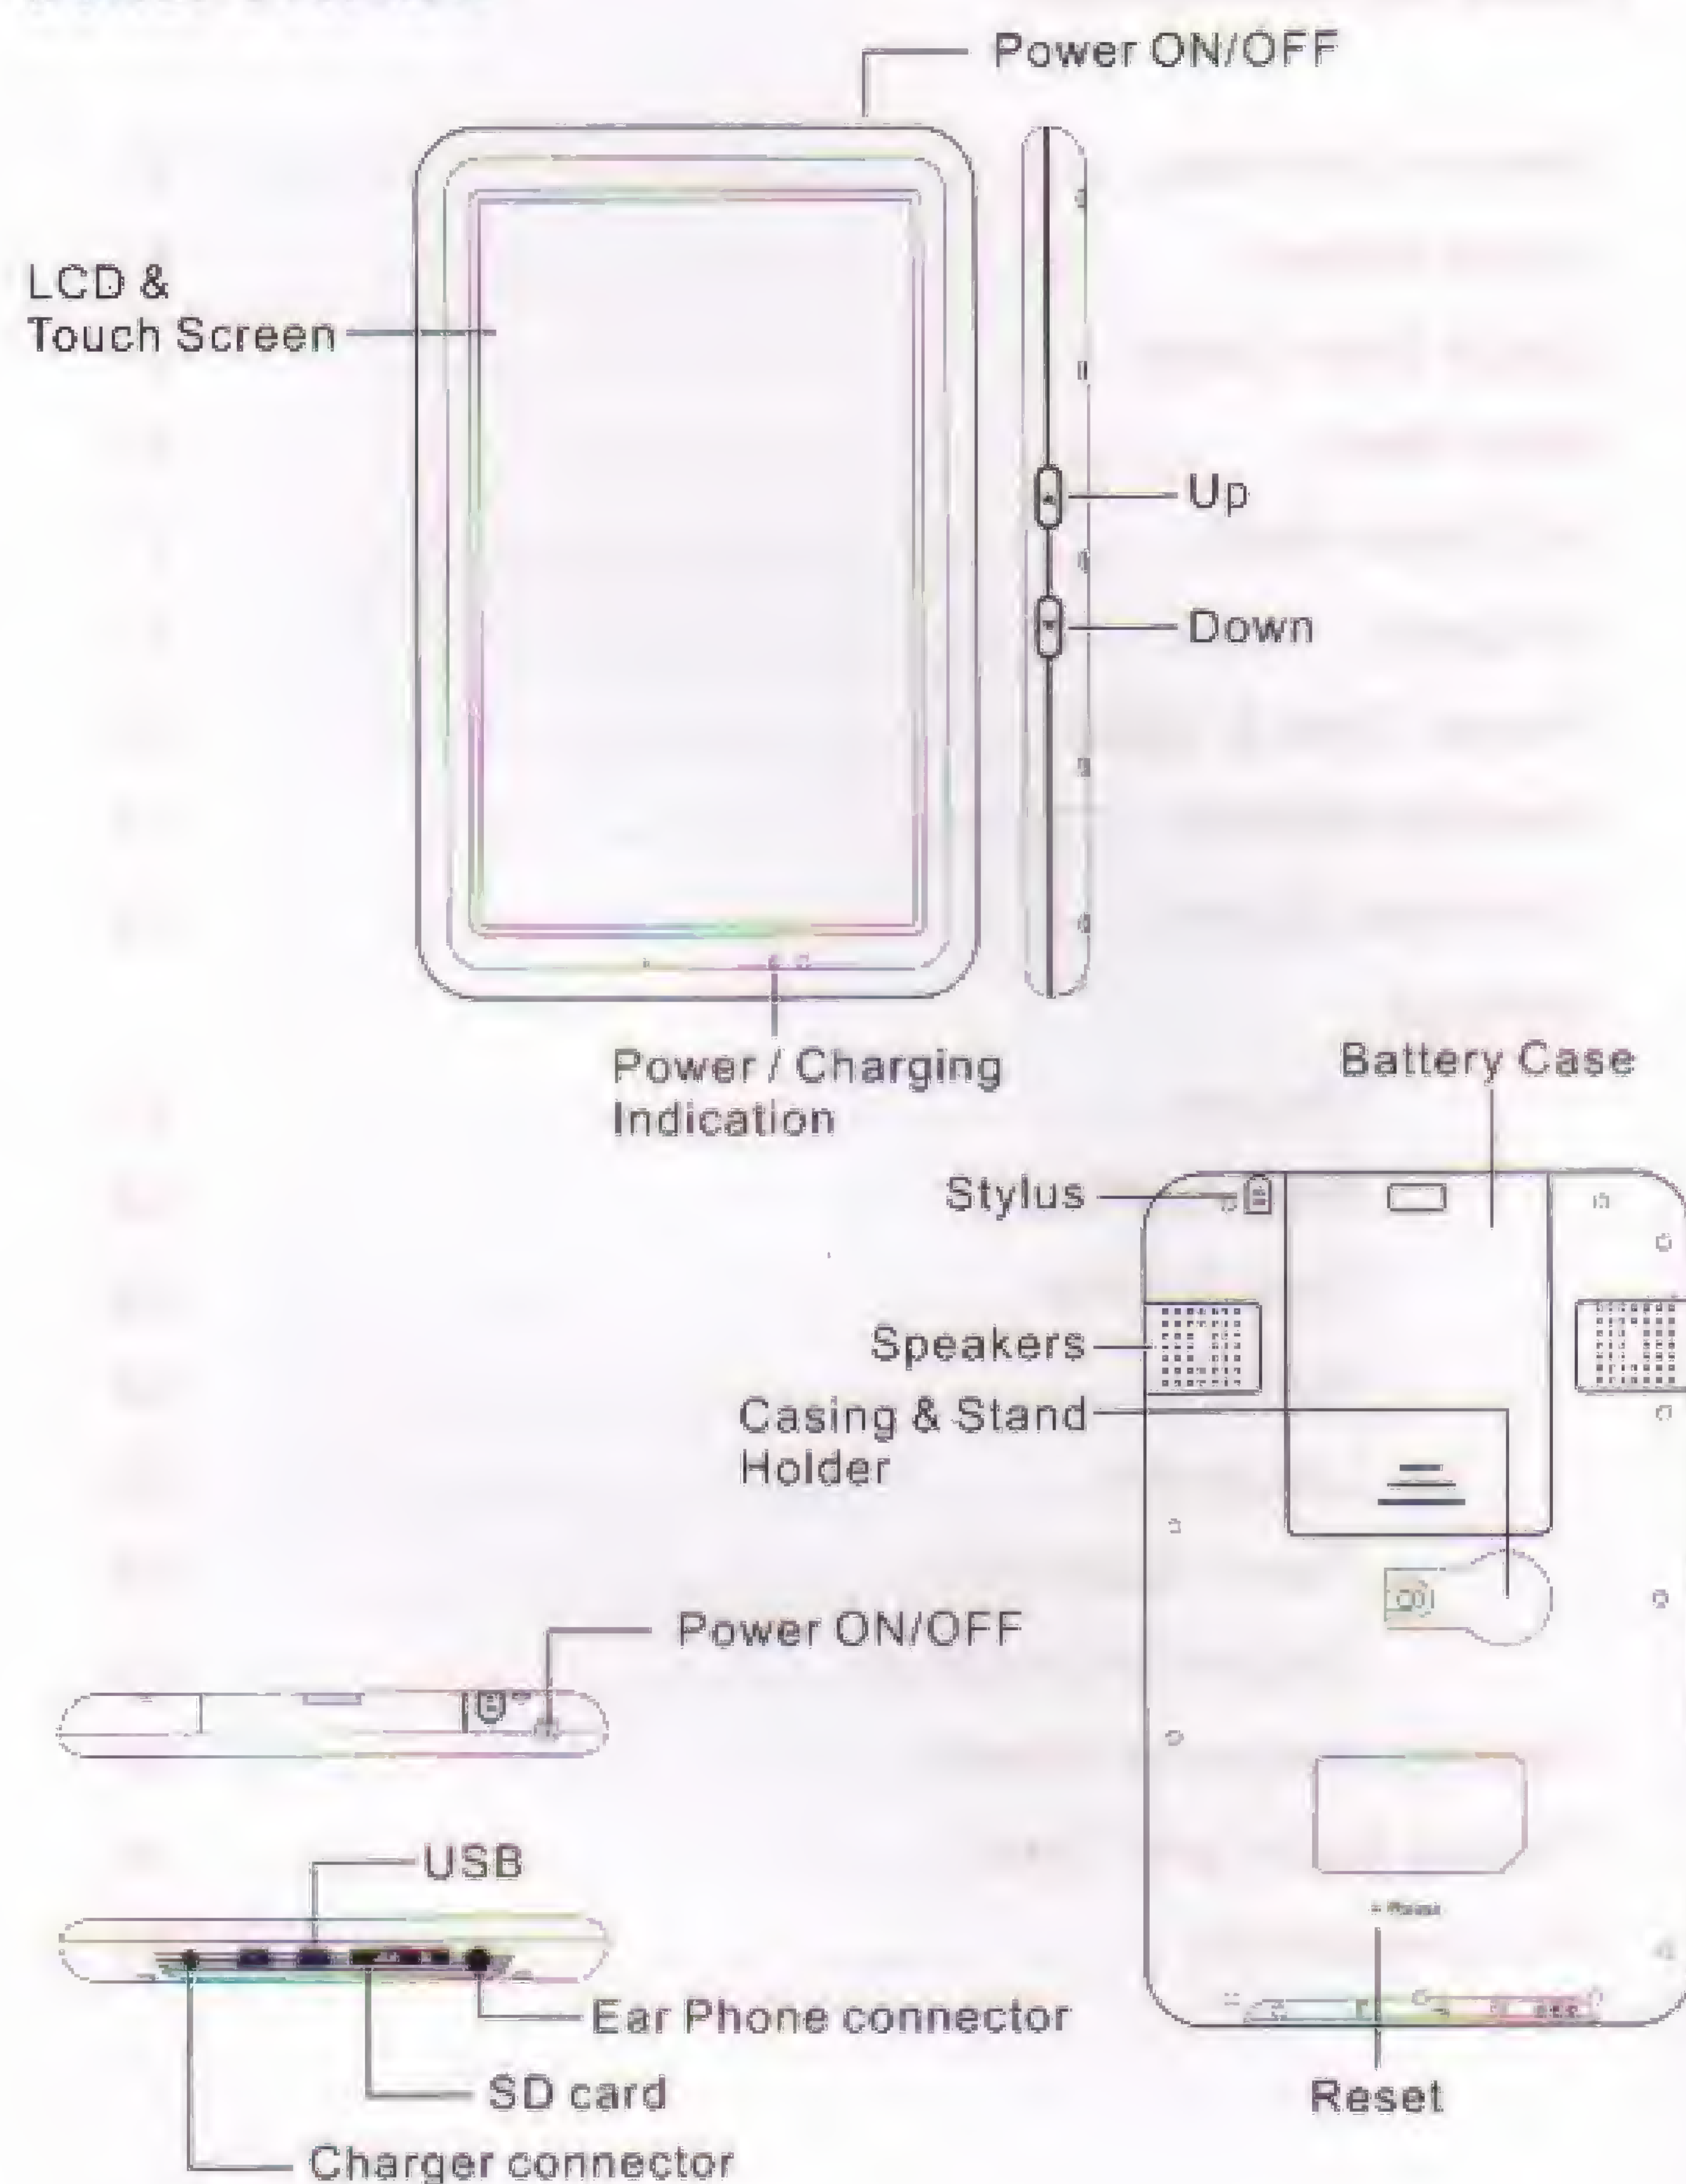

Using Battery Power

 The device is designed to work with a removable battery. A fully charged pack will provide several hours of battery life. Additional battery packs are optional and can be purchased separately.

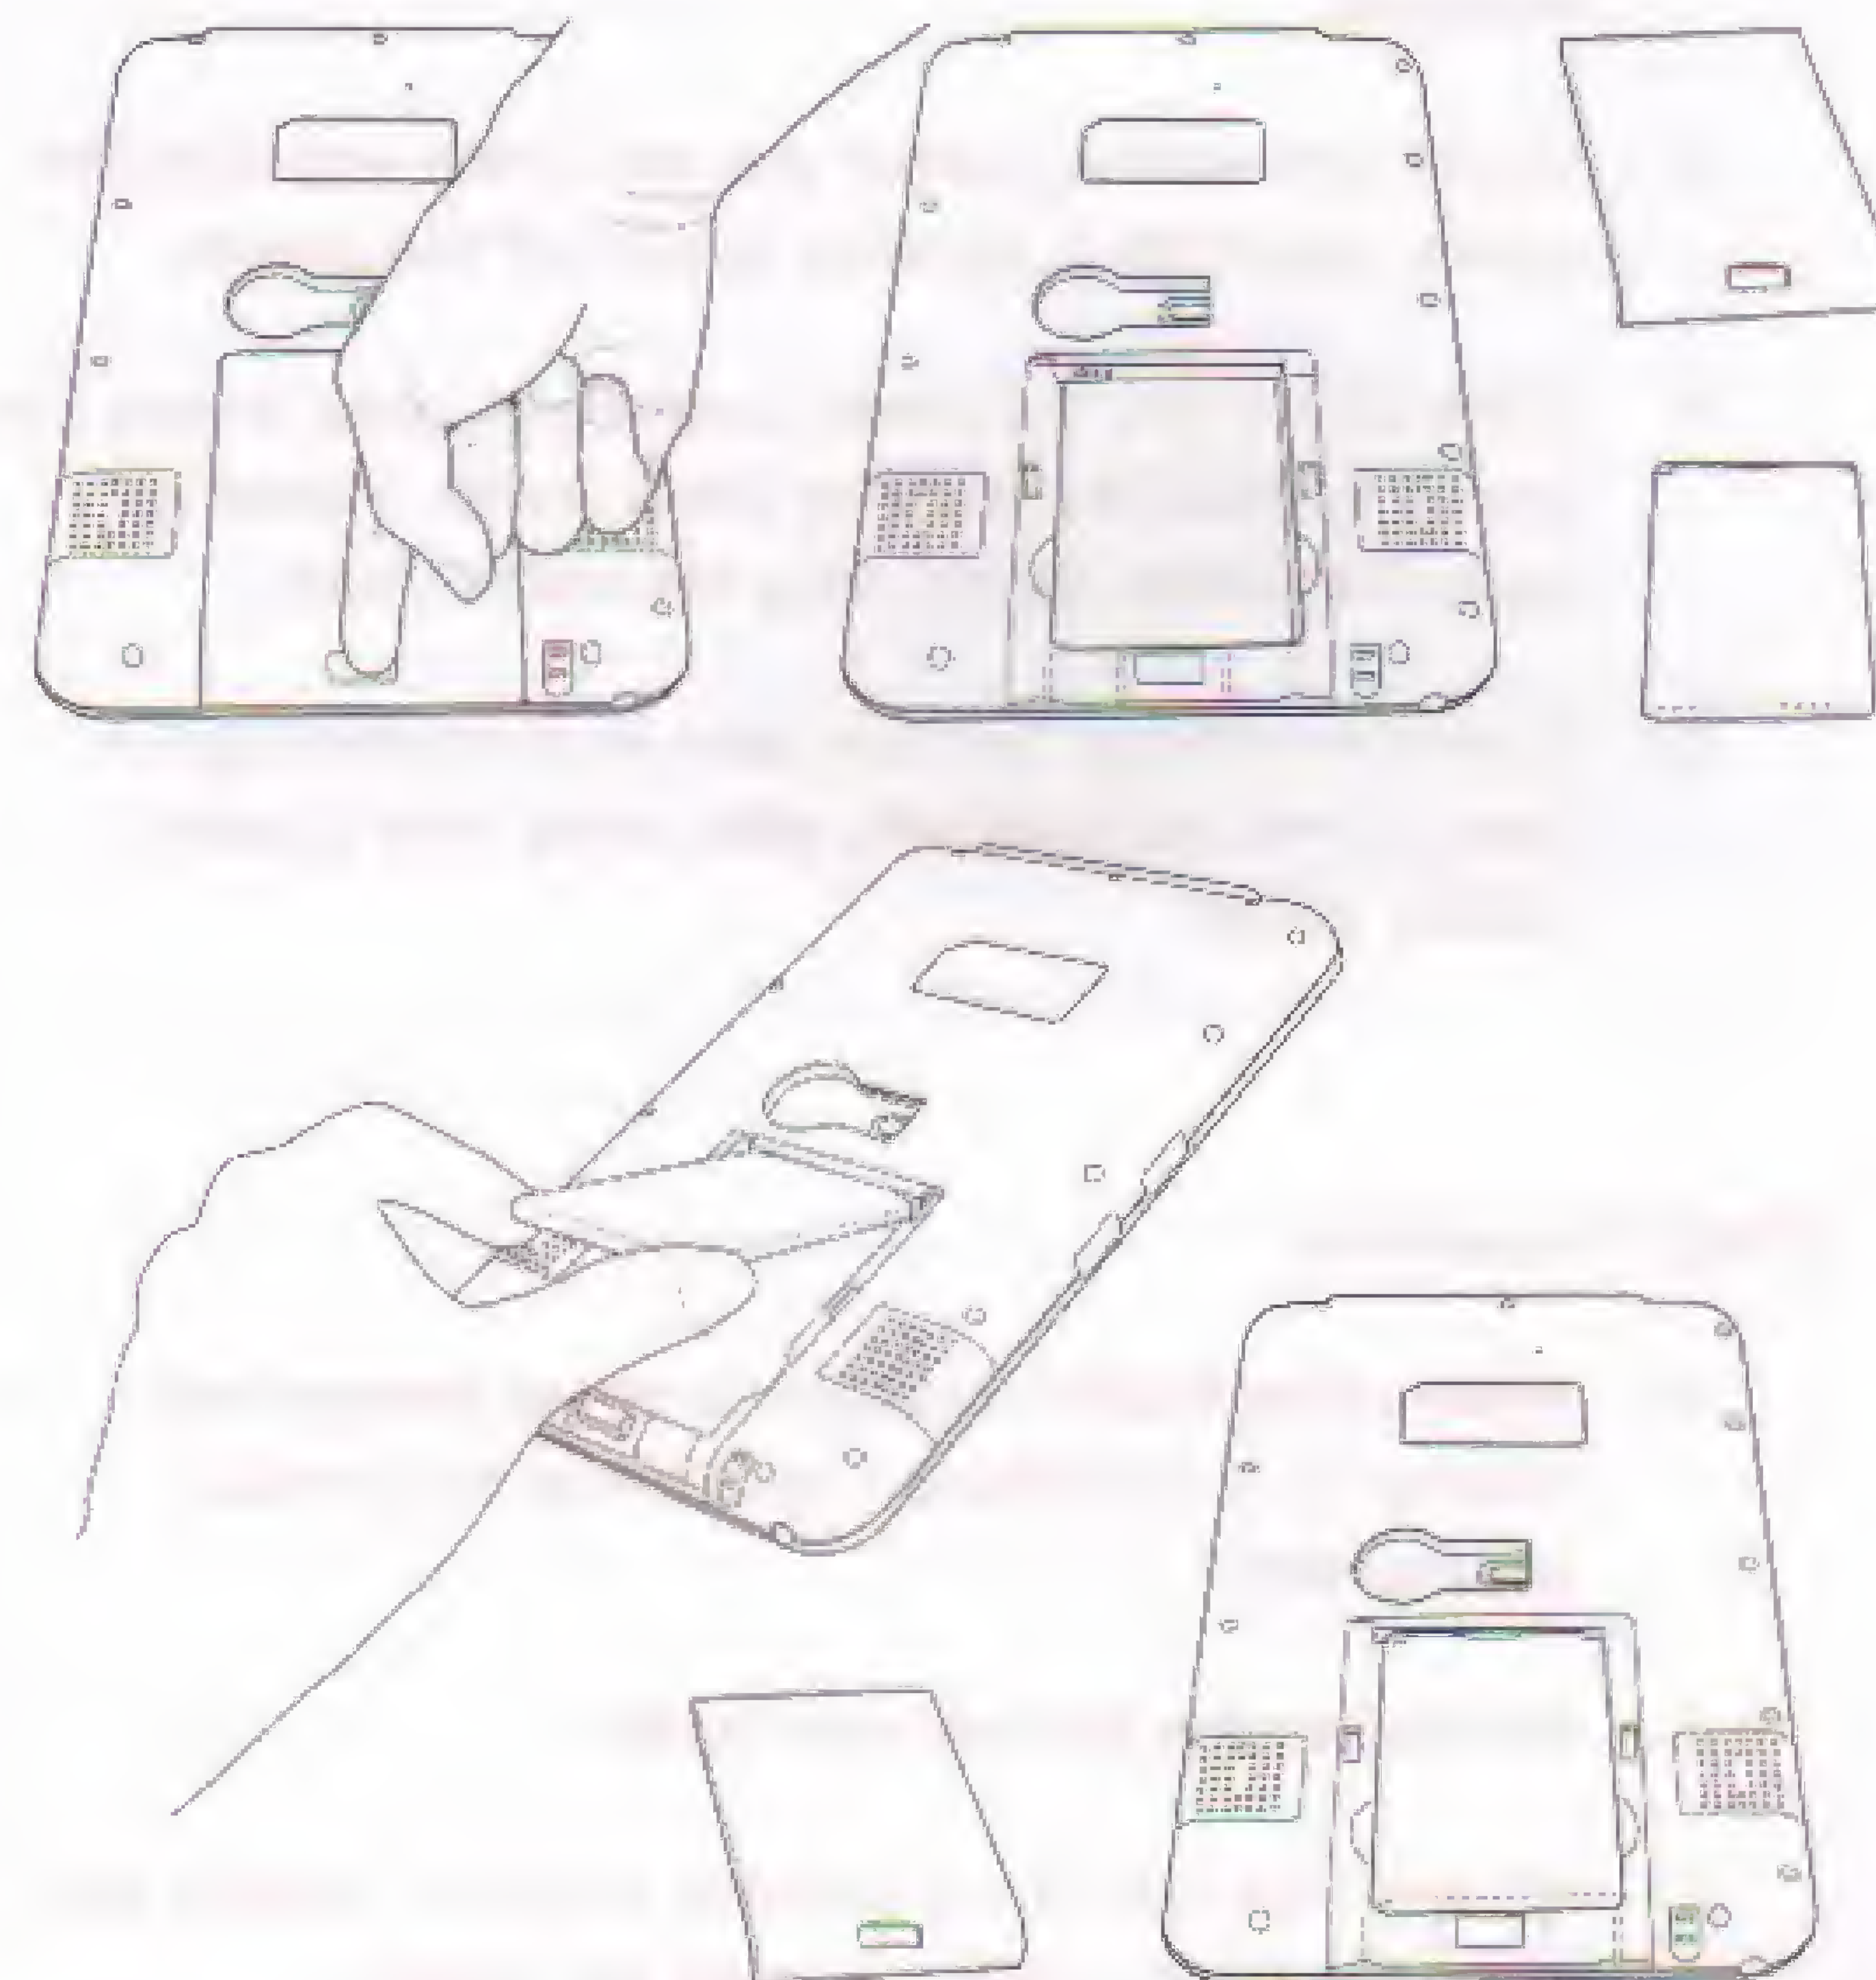

Quick Start Guide

Basic Operation:

1. Put charged battery in to the device.
2. Press the Power button on top of the device for 2 seconds.
3. Under any working status you can press and hold the power button for 2 seconds to turn off the device.
4. While ON, press the power button just once to take the device in stand-by mode or sleep mode. Pressing again the power button once will wake it back.
5. From the settings, you can also let the device go in sleep mode automatically after some time to save battery power.

Safety Precautions:

1. While using AC/DC charger, is power source and polarity (+/-) consistency must follow the product requirement
2. Do not use the product near water
3. If the device halt or not working properly, remove and insert the battery again to reset the device.

Main Menu

 
The main menu lets you run different applications. Just tap any of the icons.

The top left corner shows the current time and top-right corner shows the battery status

The applications or options in the main menu are:

True Uthmanic Quran:

Quran in Uthmanic style and displayed same as the printed Quran.

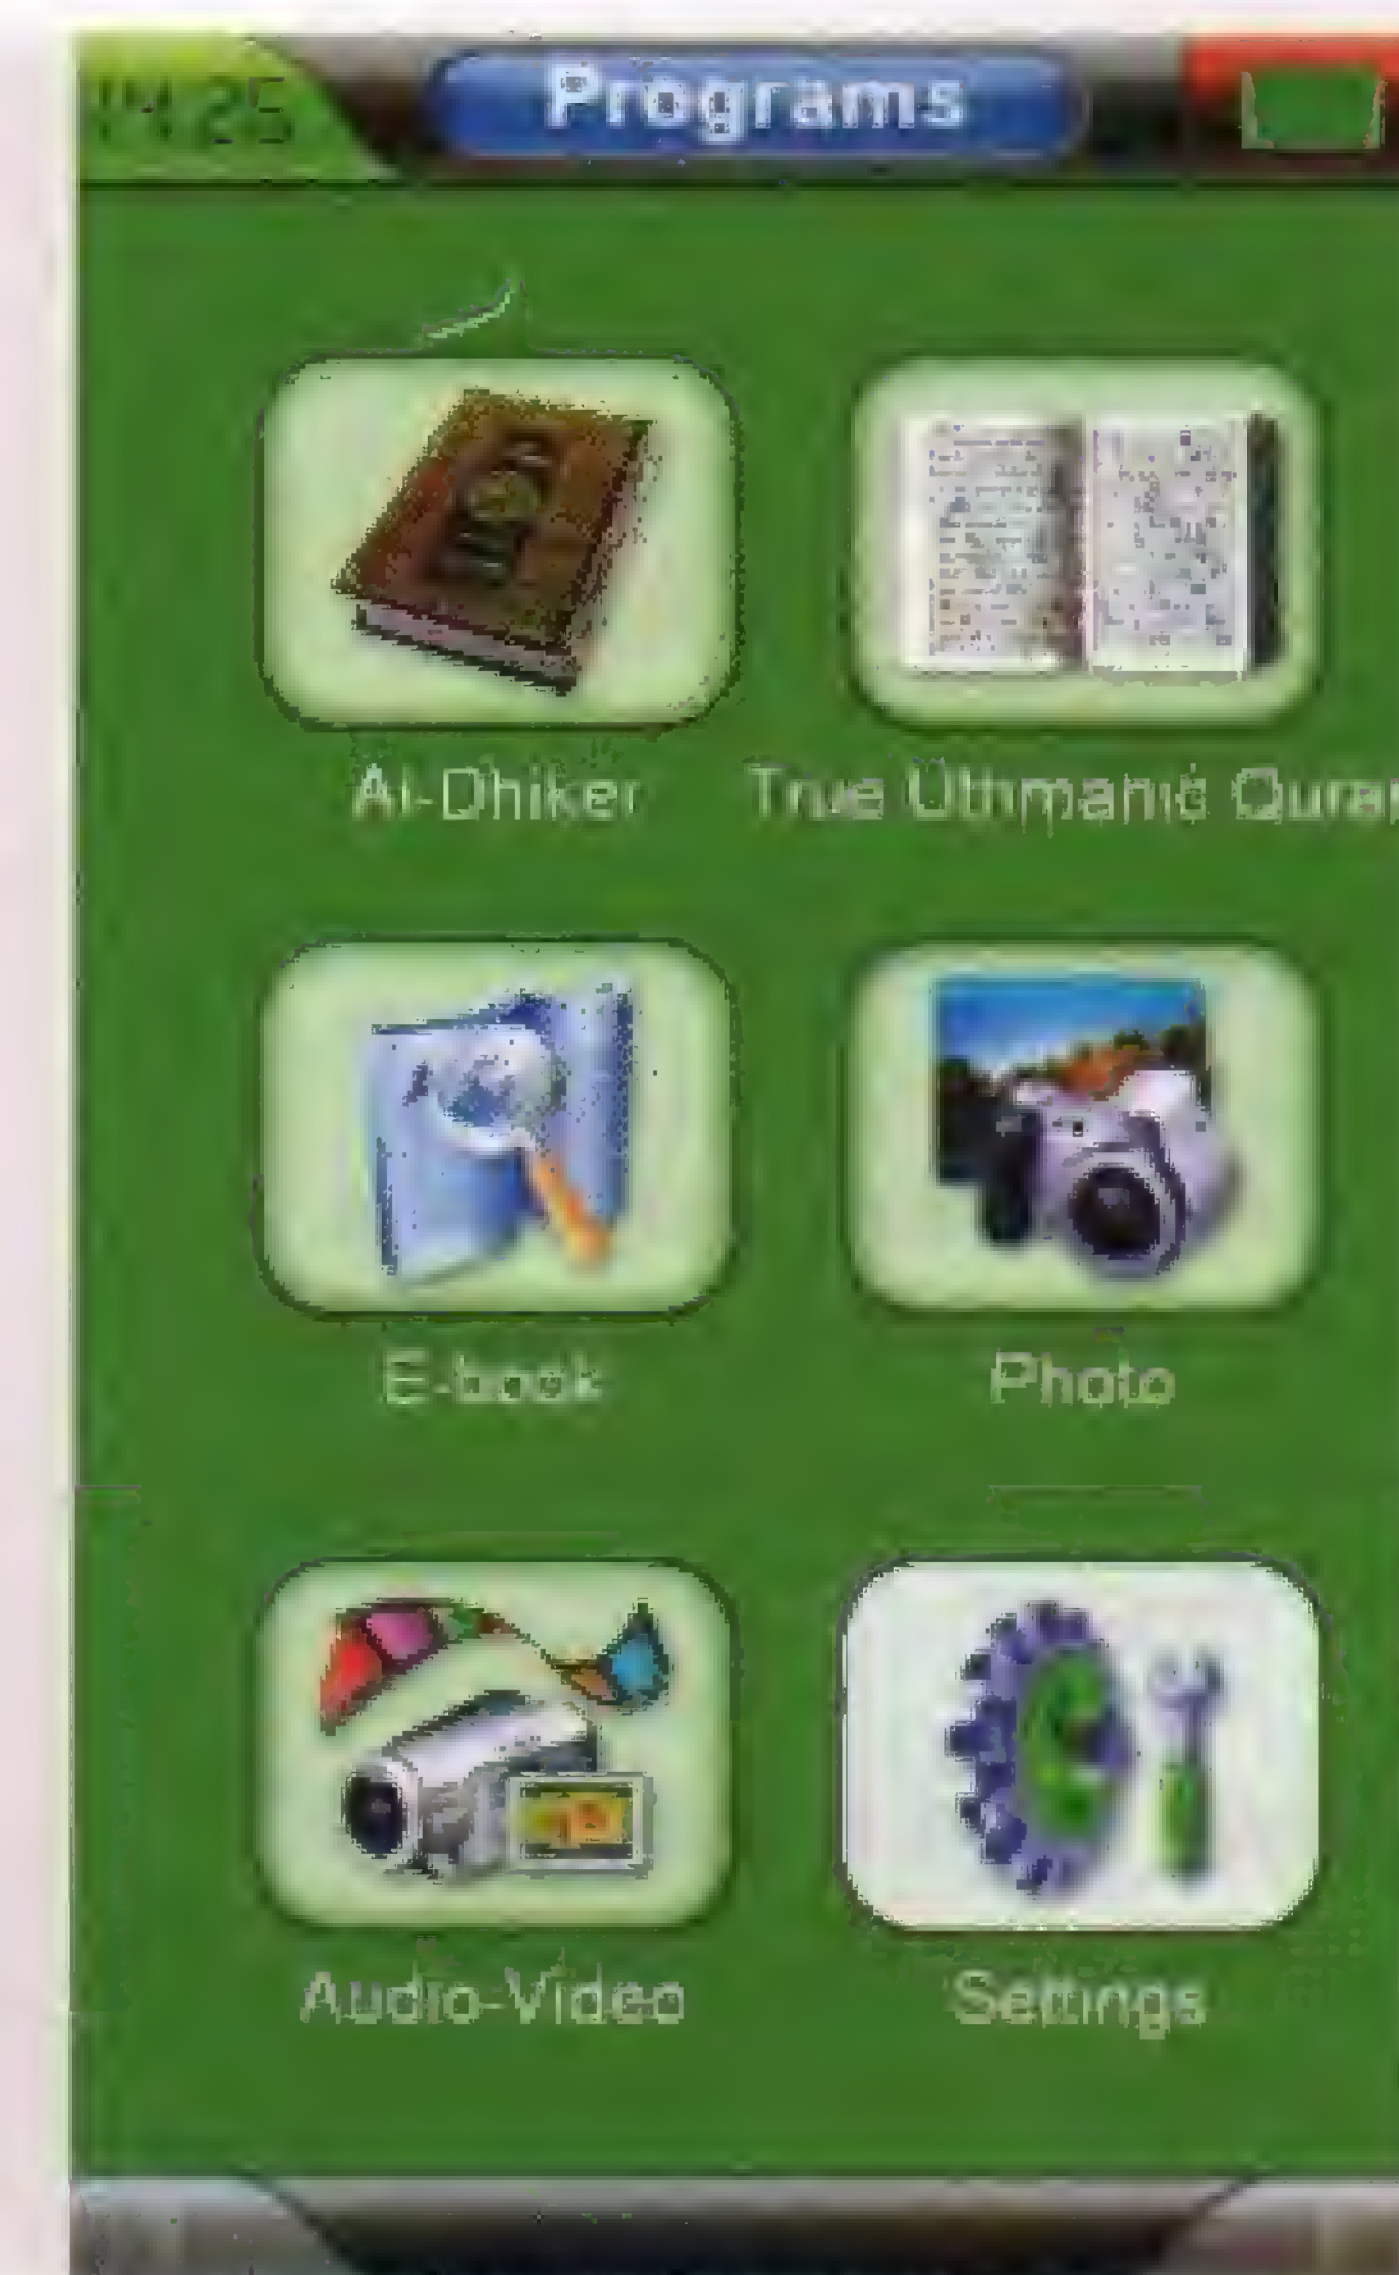

Al-Dhiker: Digital Quran, Pray Time, Qibla Direction, Hadeeth, Tafseer and other books etc

Audio-Video: Lets you play different multimedia files.

Photo: Image viewer to see images and photos of your choice.

eBook: To read eBook files of different formats.

Settings: For different setting parameters of the device.

Al-Dhiker Menu

The Al-Dhiker is a collection of different Islamic applications including the following:

Al-Quran: Display the complete Quran in digital format with translation and audio recitation with selection of Surah, Ayah, Translation and Recitor.

Prayer Time & Qibla: An easy to use interface for displaying daily prayer times and Qibla direction for all major cities of the world. User can adjust the pray times and set the Adhan alarm with different options.

eBooks: Quick and easy access to collection of Quran Tafseer, Hadeeth, Adhkar and other Islamic eBooks in different file formats. The same books can also be accessed from the eBook menu on the main menu, but from here the user will be taken directly to the respective folder of Tafseer, Hadeeth etc.

 


Al-Dhiker >> Al-Quran Menu

Al-Quran menu allows to select the Surah (Chapter), Ayah (Verse), Translation or the Qari (Recitor).

Initially the system will take few seconds to load the Quran in memory so that when you navigate within the Quran, it is very fast.

Tap on any of the item and it will show a drop-down list from where you can scroll up/down and make your selection.

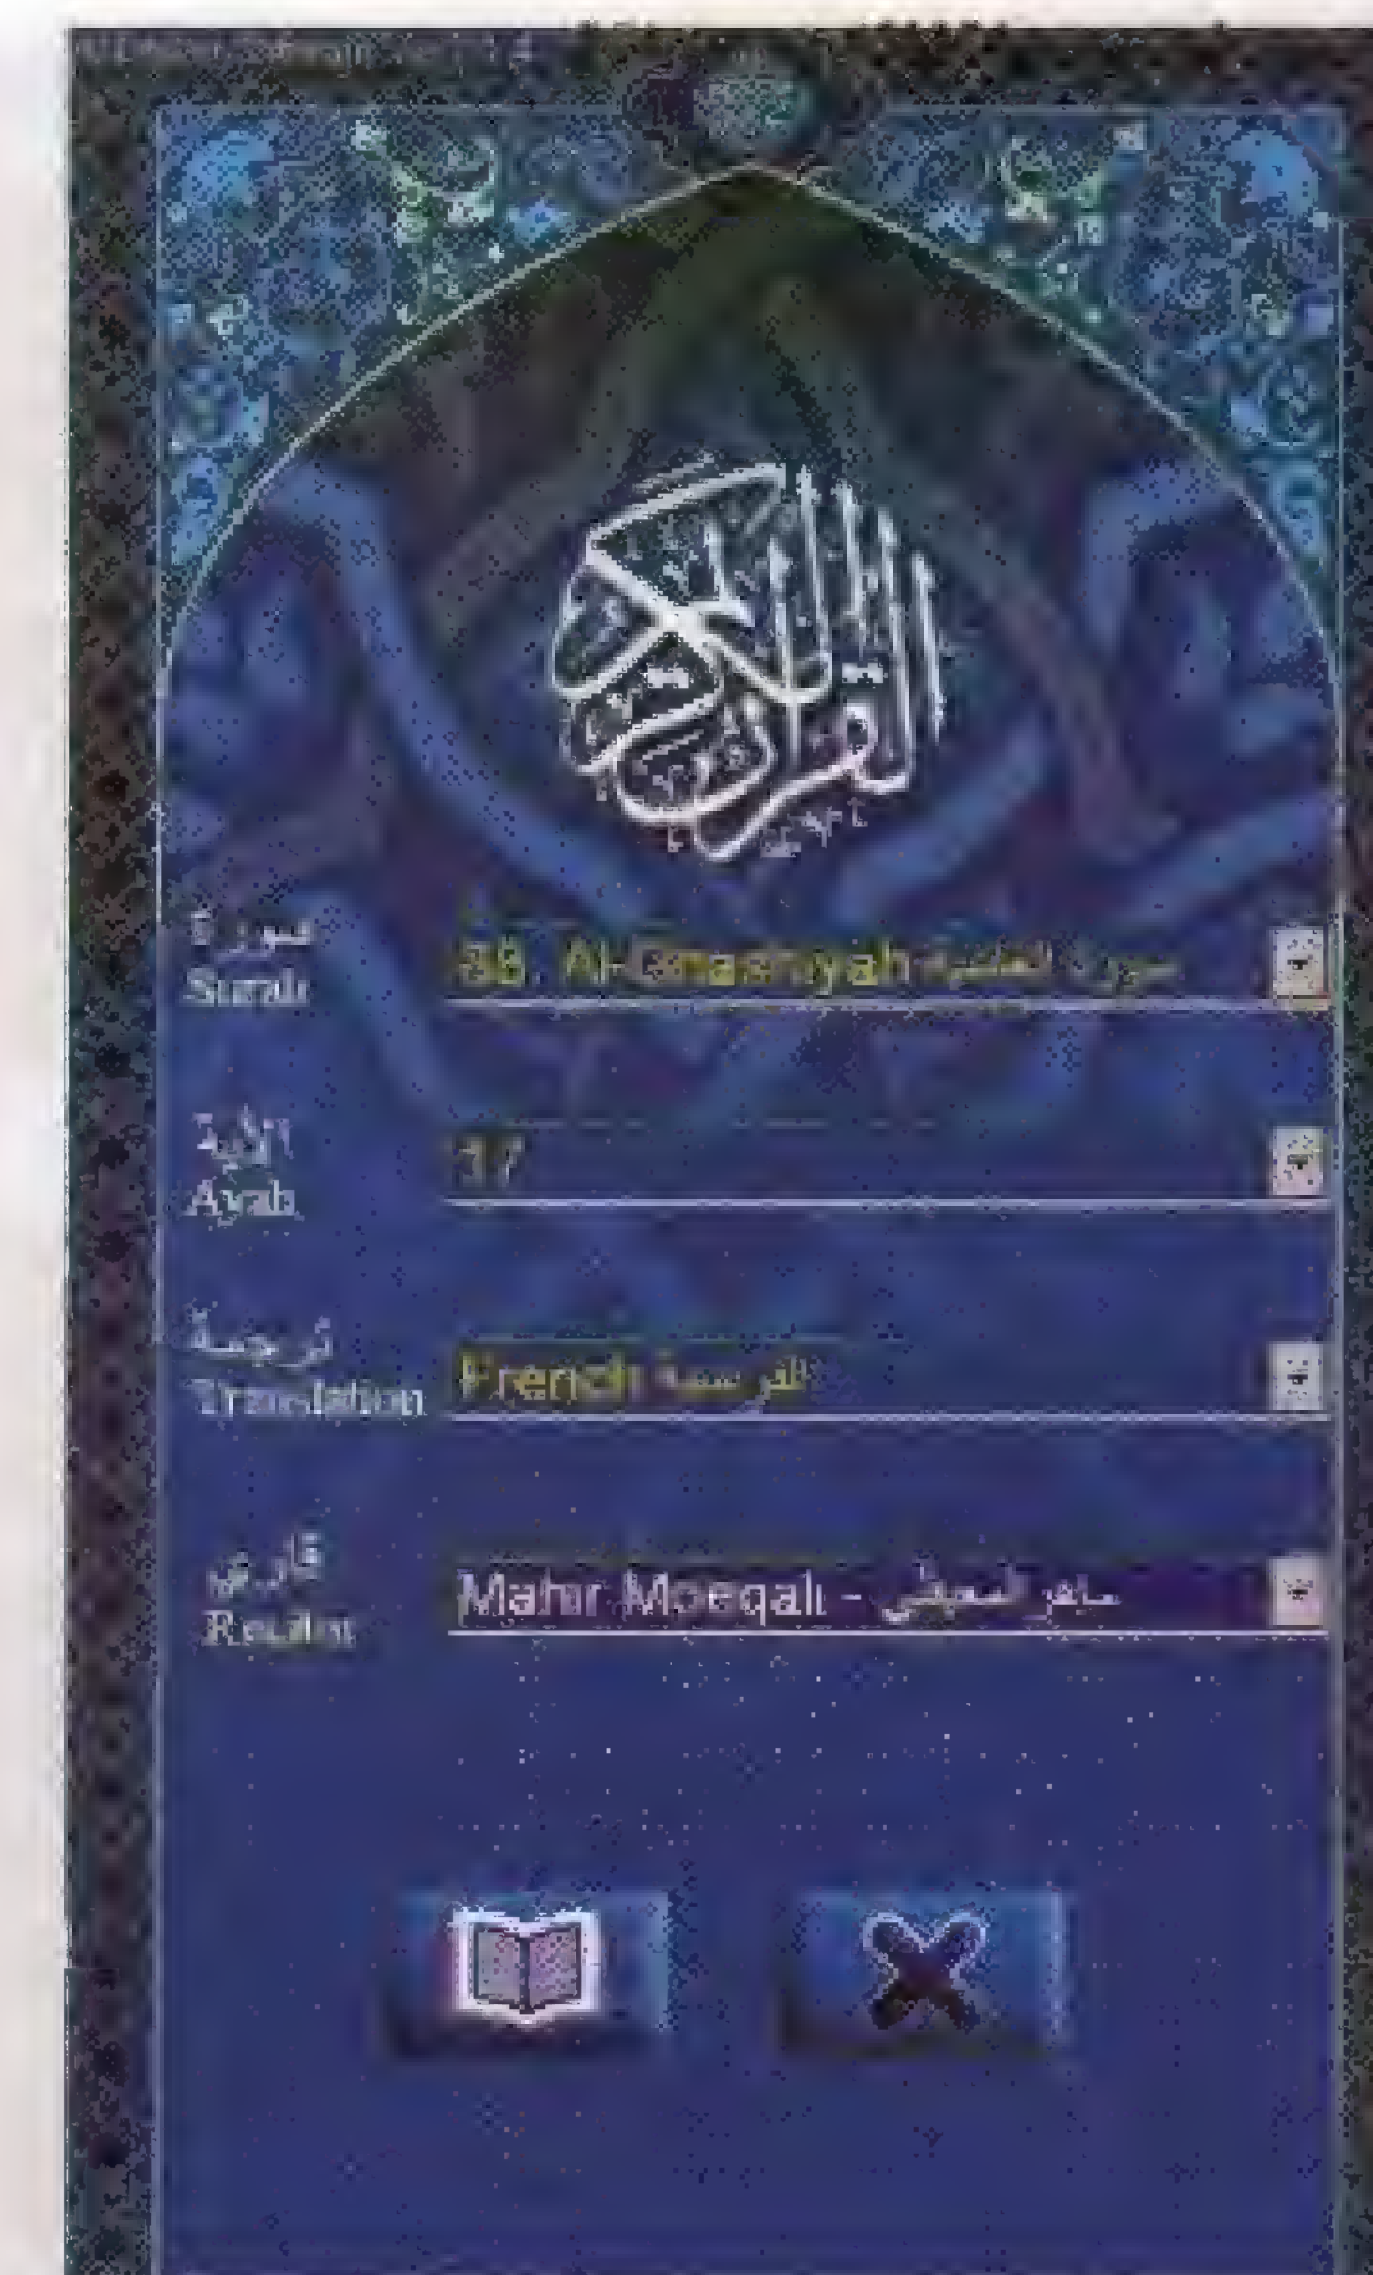

Every time, you change the Translation, the system will take few seconds to load the whole translation of Quran in memory. There will be no delay for changing the Surah, Ayah or Qari.

 
Selections will be saved once you exit this menu. Tap the Quran icon to display Quran or tap the cross icon to exit.



Al-Quran Text & Audio

The Al-Quran is displayed verse by verse. The top area shows the verse in Arabic and the bottom area shows the text of the translation of the meaning of the Quran. If complete Ayah text is not visible, use the scroll bar on right to move up/down

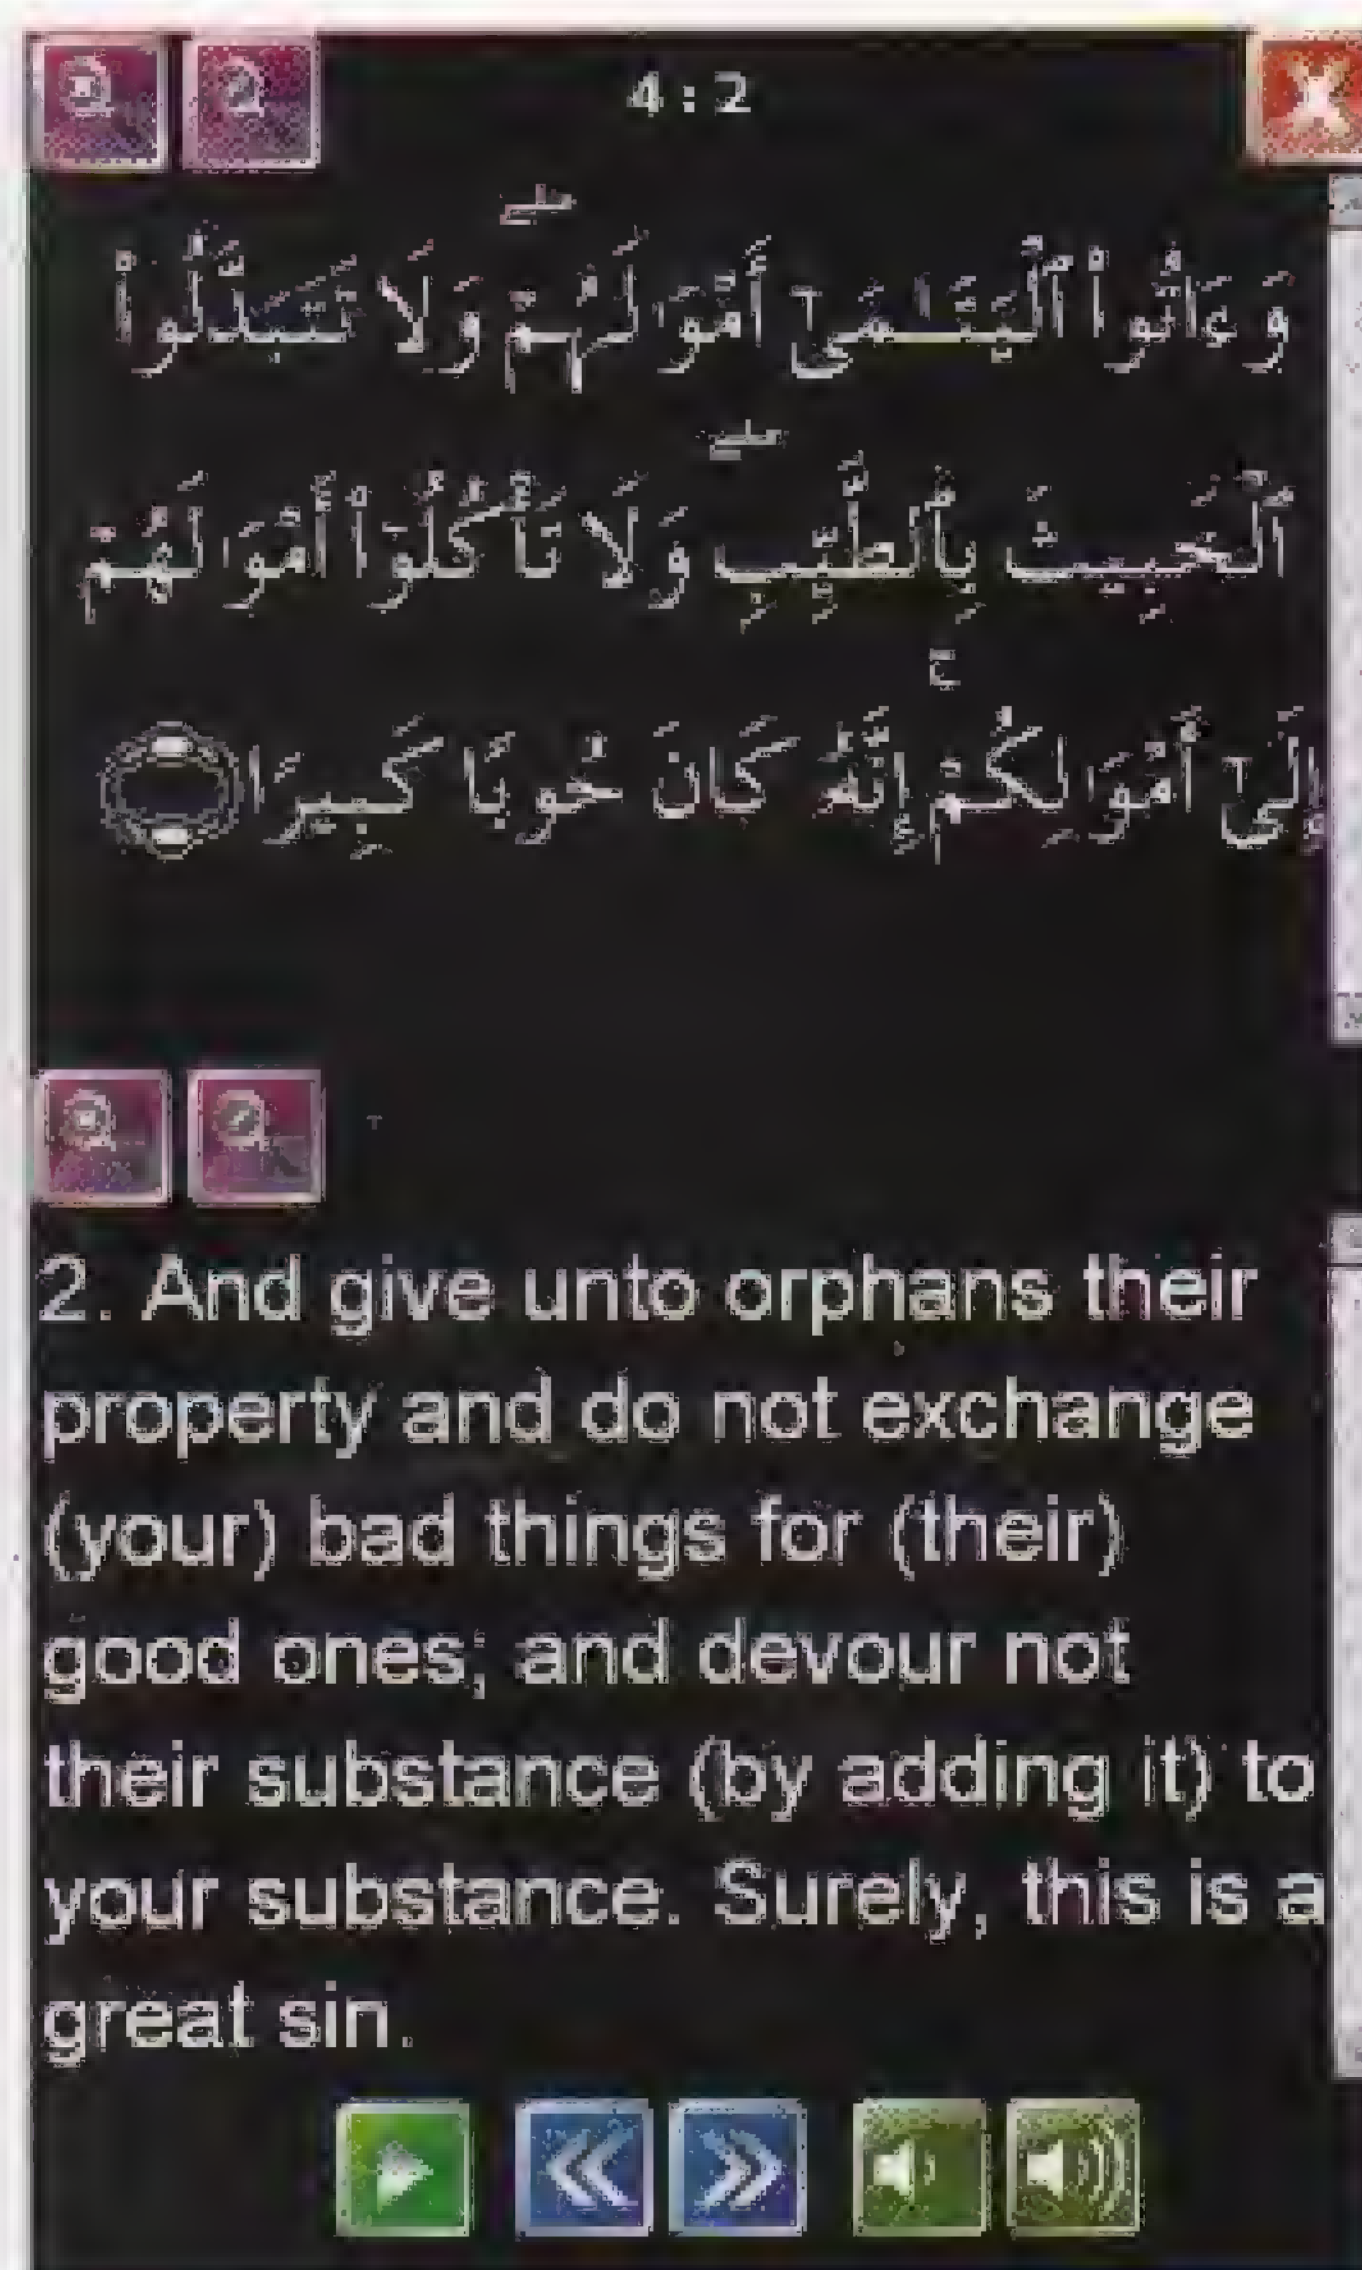

The purple Zoom In/Out buttons allow to change the text size of both Arabic and the translation separately.

The top of the screen (for example 4:2) means the current Chapter:Verse.



The blue  and  buttons let you to navigate to next or previous Ayah (Verse). You can change the Ayah both during the audio recitation or in pause mode for reading text only.

The Play/Pause button can be used to Play or Pause the audio recitation. Pause audio, if you want only to read the Quran.

Use   two green buttons to adjust the audio volume. You can also set the volume from the main system volume settings.

Use  red exit button on top right corner to go back to menu.

Prayer Time & Qibla >> Main Screen

Prayer Time & Qibla displays the Prayer Times and Qibla direction of the selected city.

The screen shows date and time also with prayer timings for Fajr, Shoruq, Zuhr, Asr, Magrib, Isha for current date.

There is an option of Alarm ON and OFF after each Prayer timings, The selected Adhan will be played when Alarm is ON. Tap on the speaker icon to turn on/off the Adhan alarm. If a red cross appears on the speaker icon then this means the Adhan alarm for this prayer is disabled.



Tap the settings icon to change your city, juristic or fine adjustments to the delay in alarm as per your requirement.

Tap the compass icon to show the Qibla direction graphically.